


# GLUED FLOOR INSTALLATION

## INSTALLATION



### Tools required

Short-pile roller, multipart roller, tape measure, craft knife, pencil, ruler, chalk line, cloth, rubber mallet.

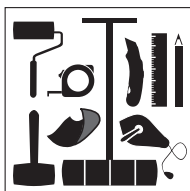

### Mesurements



1. Find the centre of the room using a chalk line from the middle of wall A to the middle of A1. Next, make a line from the middle of wall B to the middle of wall B1. Make sure the intersection of the two lines forms a 90° angle.
2. If installation is on the diagonal, make a line using the chalk line at the intersection of lines A and B. The intersection of these lines will form an angle of 45°.
3. Verification measurement: check the size of the room by measuring or laying the tiles (without gluing) from the middle. Ensure that the width of the tiles that will be placed along the wall is identical and greater than 5 cm. If necessary, repeat the previous step by drawing a line parallel to the previous one.

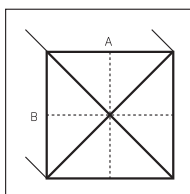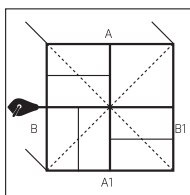

## APPLYING THE GLUE

This glue should be applied to the subfloor and also to the tiles.

1. Mix the glue well before use.
2. Apply the glue to the back of the cork tiles with a short-pile roller.
3. Apply the glue to the subfloor with a short-pile roller. Avoid excess glue.
4. Allow the glue to dry completely (after drying, the glue becomes transparent). Drying time on the subfloor is 40-60 minutes, depending on the temperature and R.H. on site.

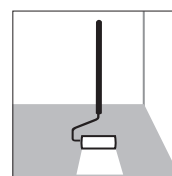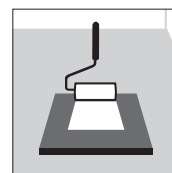

## APPLICATION

1. Instalar os ladrilhos a partir do centro ao longo da linha marcada, de preferência usando o padrão mata-junta.
2. Place the tiles side by side without applying much pressure. Use a rubber mallet to affix them.
3. Remove any excess adhesive with a damp cloth.
4. Cut the tiles along the wall as indicated.
5. The installed flooring should be pressed with a 50-kg multipart roller every 30 minutes, and after installation has been completed.

## RECOMMENDED GLUES

Wakol D-3540

